


Air Distributor Duct Replacement


Removal Procedure

1. Remove the I/P trim panel. Refer to [Trim Panel Replacement - Instrument Panel \(I/P\) Upper](#) in Instrument Panel, Gages, and Console.

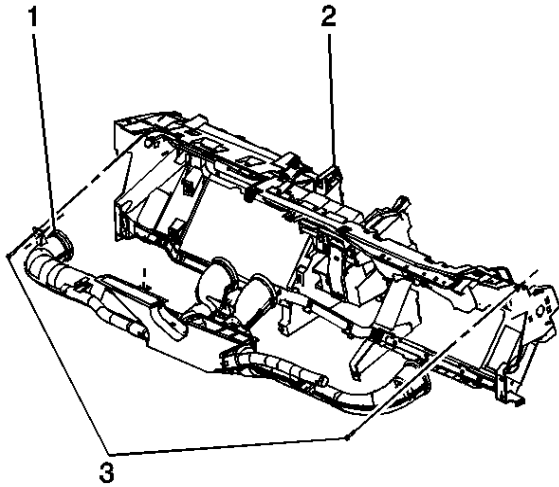

2. Remove the screws (3) from the air distribution duct (1).
3. Remove the air distribution duct (1) from the I/P trim panel (2).

Installation Procedure

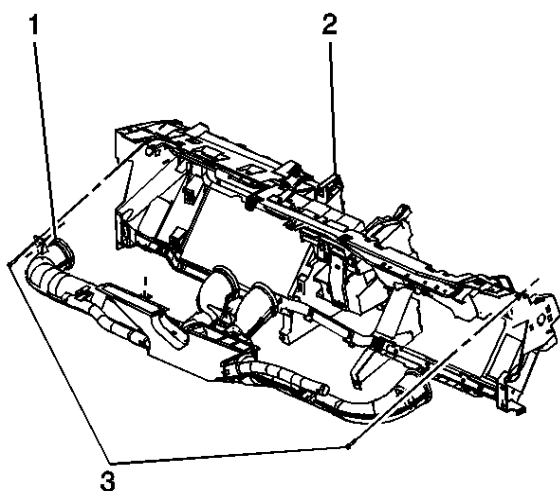

1. Install the air distribution duct (1) to the I/P trim panel (2).

Notice

Use the correct fastener in the correct location. Replacement fasteners must be the correct part number for that application. Fasteners requiring replacement or fasteners requiring the use of thread locking compound or sealant are identified in the service procedure. Do not use paints, lubricants, or corrosion inhibitors on fasteners or fastener joint surfaces unless specified. These coatings affect fastener torque and joint clamping force and may damage the fastener. Use the correct tightening sequence and specifications when installing fasteners in order to avoid damage to parts and systems.

2. Install the screws (3) to the air distribution duct (1).

Tighten

Tighten the screws to 2 N·m (18 lb in).

3. Install the I/P trim panel. Refer to [Trim Panel Replacement - Instrument Panel \(I/P\) Upper](#) in Instrument Panel, Gages, and Console.