

PAGE **B-16**

GROUND ZONE 1
Type = CLEAN
PCMECM GND #1
PCMECM GND #2
PCMECM GND #3
PCMECM GND #4
TCM GND #1
TCM GND #2
NBSU SWITCH
MAP SENSOR 1 AT
LOW COIL SWITCH
O2 SENSOR #1
O2 SENSOR #2
O2 SENSOR #3
O2 SENSOR #4

GROUND ZONE 2
Type = DIRTY
ODM
LF MINI WEDGE
DRIVER SW LOCK SW
DOOR LOCK RELAY
LH CITY LAMP
FRONT WIPER SW
EMERGENCY LT RELAY
TRANSFER CASE SW
TREC MCL - GND #1
TREC MCL GND #2
QH HEADING LUMPS
FRONT WIPER MOTOR
CLUSTER
DATA LINK CONN.
UW LAMP
HAZARD SWITCH
BTS SWITCH
HEADLAMP SW
LAP RELAY
LIGHT BAR SWITCH
EMERGENCY LT RELAY

GROUND ZONE 3
Type = DIRTY
MSR SWITCH
FRNT PCAT SENSOR/MTR
B-PILLAR DOME LMP (+VE)
D-PILLAR DOME LMP (+VE)
LH CITY LAMP
LH SUNSHADE ILLUM
FRNT AUX HVAC MCL
RR PCAT SENSOR/MTR
RH SUNSHADE ILLUM
C-PILLAR DOME/ROG LMP (+VE)
QH HEADING LUMPS
B-PILLAR DOME/ROG LMP (+VE)
DRY MIRROR/COMPASS
PDR
PASS LOCK SW
RF MINI WEDGE
SUNROOF RELAY
POWER SUNROOF
ROOF MARKER LUMPS

GROUND ZONE 4
Type = DIRTY
AIR INLET MTR ASM
BLOWER MTR RES ASM
FRONT BLOWER MTR
AUX PWR OUTLET
AUX PWR OUTLET
PTO SWITCH
RH CITY LAMP
RH CITY LAMP
HVAC MCL BACKLIGHT
CIGAR LIGHTER ILLUM
AUX PWR OUTLET
PSR DEFEAT SW
GLOVE BOX LMP
QSA SWITCH
ANALOG CLOCK
ASRTRAY LMP
AUX PWR OUTLET
POWER POINT
LR HTD SEAT SW
RR HTD SEAT SW
UMB RADIO

GROUND ZONE 5
Type = DIRTY
PASSENGER SEAT
RR MINI WEDGE
RR PWR WDO SW
RR DOOR CTY LMP
RR HTD SEAT

GROUND ZONE 6
Type = DIRTY
RR AUX MODE ACT
RR AUX TEMP ACT
RR HVAC MODULE GND #1
RR HVAC MODULE GND #2
TECC MODULE ASM
RR AUX HVAC ASM
RR HVAC MCL ASM
LIFT GLASS SW
RR WIPER MTR
LH LIFT GATE AJAR SW
RH LIFT GATE AJAR SW
LIFT GATE WDO GND (ES2)
D-PILLAR
LH DOOR AJAR (ZW)
AUX PWR POWER POINT
RPA MODULE
RPA DIAGNOSTIC CONN.
RTO MODULE
RH DOOR AJAR (ZW)

GROUND ZONE 7
Type = DIRTY
BATT NEG (AUX AND SEC)

GROUND ZONE 8
Type = DIRTY
CASE GROUND
Type = CASE
SPK/W PLUGS
GLW PLUG CONTROLLER
GP LT BNK CRTL RLY COIL
GP RT BNK CRTL RLY COIL

GROUND ZONE 9
Type = CASE
CASE GROUND
Type = CASE
MAN XFER CASE SW

GROUND ZONE 10
Type = CASE
CASE GROUND
Type = CASE
STARTER MTR

GROUND ZONE 11
Type = DIRTY
GND ZONE 7
RH ENGINE

GROUND ZONE 12
Type = DIRTY
GND ZONE 1
RIGHT REAR ENGINE BLOCK

GROUND ZONE 13
Type = DIRTY
GND ZONE 5
ENGINE BLOCK

GROUND ZONE 14
Type = CASE
CASE GROUND
Type = CASE
GENERATORS

GROUND ZONE 15
Type = CASE
CASE GROUND
Type = CASE
KNOCK SENSOR 1
KNOCK SENSOR 2

GROUND ZONE 16
Type = CASE
CASE GROUND
Type = CASE
EDU (LBT)

GROUND ZONE 17
Type = DIRTY
EVEN IGN COIL/DRIVER
ODD IGN COIL/DRIVER
COIL ASM DRIVER

GROUND ZONE 18
Type = DIRTY
BATTERY NEG
QSA MOTOR
QSA MODULE

GROUND ZONE 19
Type = DIRTY
PRIMARY FUEL RELAY
BRAKE DIFFERENTIAL SW
DRY RELAY
LOW COOLANT SW
EVEN IGN COIL/DRIVER
ODD IGN COIL/DRIVER
COIL ASM DRIVER
A/C CLUTCH
ETC MODULE SW
PFC CYCLING SW
PFC CONNECTOR
AUX BATT SOL IN/OUT (TP2)
FLEX FUEL SENSOR
HYDROBOOST FLUID LVL SW
BRAKE FLUID LVL SW

GROUND ZONE 20
Type = DIRTY
RH HORN
LH HORN
RH DBL
LH DBL
RH TURN/PARK LMP
LH TURN/PARK LMP
RH LOW BEAM LMP
LH LOW BEAM LMP
RH HIGH BEAM LMP
LH HIGH BEAM LMP
RH FOG LMP
LH FOG LMP
FRNT WASHER PMP MTR
RR WASHER PMP MTR
LOW WASHER SWITCH
PRIMARY BATT NEG

GROUND ZONE 21
Type = DIRTY
ABS PUMP
FRNT AXLE SWITCH ASM
TRANSFER CASE LEVER ASM

GROUND ZONE 22
Type = DIRTY
PRIMARY FUEL PUMP
SECONDARY FUEL PUMP

GROUND ZONE 23
Type = DIRTY
TOW/HAIL & KEY IN SW
HURES POS SENSOR
RADIO GND
FLASHER ASM
LF PWR GND LOCK SW
CDX MODULE
VESSELS MODULE
ORSTAR MODULE GND #1
ONSTAR MODULE GND #2
IPC MODULE GND #2
RPA MODULE GND
PASS LOCK SW
CRUISE MODULE
DAB/SDARS MODULE
HVAC MODULE
DATA LINK CONN. GND #2
BOGE LAMP
TBC GND #1
TBC GND #2
ADG CONN.
TRLR WIRING
RESE MODULE
HEADLAMP SW GND #2
TCVSSES SW
RPA DISABLE SW
FOG/CARGO LAMP SW
FRNT FOURTH WIPER SW

GROUND ZONE 24
Type = DIRTY
GND ZONE 10
Circuit #1300

GROUND ZONE 25
Type = DIRTY
GND ZONE 10
Circuit #1300

GROUND ZONE 26
Type = DIRTY
GND ZONE 10
Circuit #1300

GROUND ZONE 27
Type = DIRTY
GND ZONE 10
Circuit #1300

GROUND ZONE 28
Type = DIRTY
GND ZONE 10
Circuit #1300

GROUND ZONE 29
Type = DIRTY
GND ZONE 10
Circuit #1300

GROUND ZONE 30
Type = DIRTY
GND ZONE 10
Circuit #1300

GROUND ZONE 31
Type = DIRTY
GND ZONE 10
Circuit #1300

GROUND ZONE 32
Type = DIRTY
GND ZONE 10
Circuit #1300

GROUND ZONE 33
Type = DIRTY
GND ZONE 10
Circuit #1300

GROUND ZONE 34
Type = DIRTY
GND ZONE 10
Circuit #1300

GROUND ZONE 35
Type = DIRTY
GND ZONE 10
Circuit #1300

GROUND ZONE 36
Type = DIRTY
GND ZONE 10
Circuit #1300

GROUND ZONE 37
Type = DIRTY
GND ZONE 10
Circuit #1300

GROUND ZONE 38
Type = DIRTY
GND ZONE 10
Circuit #1300

GROUND ZONE 39
Type = DIRTY
GND ZONE 10
Circuit #1300

GROUND ZONE 40
Type = DIRTY
GND ZONE 10
Circuit #1300

GROUND ZONE 41
Type = DIRTY
GND ZONE 10
Circuit #1300

GROUND ZONE 42
Type = DIRTY
GND ZONE 10
Circuit #1300

GROUND ZONE 43
Type = DIRTY
GND ZONE 10
Circuit #1300

GROUND ZONE 44
Type = DIRTY
GND ZONE 10
Circuit #1300

GROUND ZONE 45
Type = DIRTY
GND ZONE 10
Circuit #1300

GROUND ZONE 46
Type = DIRTY
GND ZONE 10
Circuit #1300