


Instrument Cluster / Carrier

Instrument Panel Cluster (IPC) (X88/Z88)

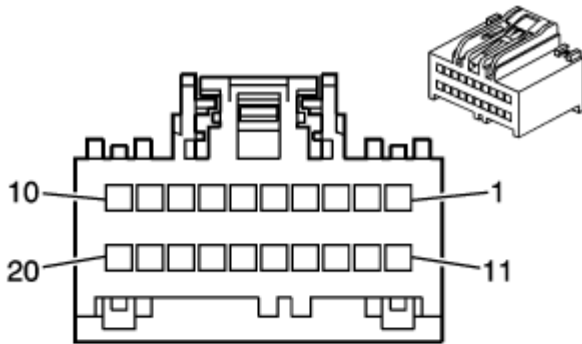

Connector Part Information

- OEM: 15489824
- Service: 15126711
- Description: 20-Way F 0.64 Series (BK)

Terminal Part Information

- Terminal/Tray: 7116-4618-02/14
- Core/Insulation Crimp: P/P
- Release Tool/Test Probe: J-38125-215/J-35616-64B (L-BU)


| Instrument Panel Cluster (IPC)(X88/Z88) | | | |
|---|------------|-------------|---|
| Pin | Wire Color | Circuit No. | Function |
| 1 | RD/WH | 2840 | Battery Positive Voltage |
| 2 | D-GN/WH | 1358 | DIC Switch Signal |
| 3-4 | — | — | Not Used |
| 5 | PK | 1639 | Ignition 1 Voltage |
| 6 | D-GN | 5060 | Low Speed GMLAN Serial Data |
| 7 | — | — | Not Used |
| 8 | YE | 6817 | LED Backlight Dimming Control |
| 9 | D-BU | 2307 | Passenger Air Bag On Indicator Control |
| 10 | D-GN | 2308 | Passenger Air Bag Off Indicator Control |
| 11 | PU | 333 | Brake Fluid Level Sensor Signal |
| 12 | TN | 185 | Low Washer Fluid Indicator Control |
| 13 | BK/WH | 1851 | Ground |
| 14-15 | — | — | Not Used |
| 16 | PK | 893 | DIC Select Menu Switch Signal |
| 17 | — | — | Not Used |
| 18 | BN/WH | 419 | MIL Control |

Instrument Panel Cluster (IPC) (With RPO Codes X88/Z88) (Pin 1 To 18)

| Instrument Panel Cluster (IPC)(X88/Z88) | | | |
|---|------------|-------------|-------------------------------|
| Pin | Wire Color | Circuit No. | Function |
| 19 | BN | 897 | DIC Switch Low Reference |
| 20 | PU | 5234 | Passenger Seat Belt Indicator |

Instrument Panel Cluster (IPC) (With RPO Codes X88/Z88) (Pin 19 To 20)

Instrument Panel Cluster (IPC) (Z75)

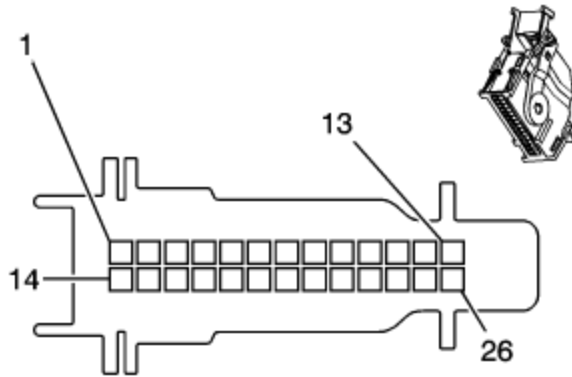

| Connector Part Information | |
|----------------------------|--|
| • | OEM: 15393409 |
| • | Service: 88987996 |
| • | Description: 26-Way F Lever Assisted (BK) |
| Terminal Part Information | |
| • | Terminal/Tray: 638551-1/16 |
| • | Core/Insulation Crimp: Pins 1–3, 9–23: J/J |
| • | Core/Insulation Crimp: Pins 5, 8: K/K |
| • | Release Tool/Test Probe: 15315247/J-35616-64B (L-BU) |

| Instrument Panel Cluster (IPC) (Z75) | | | |
|--------------------------------------|------------|-------------|------------------------------------|
| Pin | Wire Color | Circuit No. | Function |
| 1 | RD/WH | 2840 | Battery Positive Voltage |
| 2 | PK | 1639 | Ignition 1 Voltage |
| 3 | D-GN | 5060 | Low Speed GMLAN Serial Data |
| 4 | — | — | Not Used |
| 5 | BK/WH | 1851 | Ground |
| 6–7 | — | — | Not Used |
| 8 | PU | 333 | Brake Fluid Level Sensor Signal |
| 9 | BN/WH | 419 | MIL Control |
| 10–11 | — | — | Not Used |
| 12 | D-GN/WH | 1358 | DIC Switch Signal |
| 13 | BN | 897 | DIC Switch Low Reference |
| 14–16 | — | — | Not Used |
| 17 | TN | 185 | Low Washer Fluid Indicator Control |
| 18–19 | — | — | Not Used |
| 20 | PK | 893 | DIC Select Menu Switch Signal |

Instrument Panel Cluster (IPC) (With RPO Code Z75) (Pin 1 To 20)

| Instrument Panel Cluster (IPC) (Z75) | | | |
|---|-------------------|--------------------|---|
| Pin | Wire Color | Circuit No. | Function |
| 21 | PU | 5234 | Passenger Seat Belt Indicator |
| 22 | D-BU | 2307 | Passenger Air Bag On Indicator Control |
| 23 | D-GN | 2308 | Passenger Air Bag Off Indicator Control |
| 24-26 | — | — | Not Used |